



# CONECTA PRINT .es

## Tarifa Septiembre 2013

### LASER

### HP

92298A	HP Laserjet J4/4+/4M/4M+ (98A / EP-E / M2473G-A)	
92298X	HP Laserjet J4/4+/4M/4M+ (98X / EP-ED)	
C3903A	HP Laserjet J5P/5P/6P/6MP (03A / EP-V)	
C3906A	HP Laserjet J5L/6L (0,016A / EP-A)	
C3909A	HP Laserjet 5SI EPW-WX Black Empty Toner VIRGIN	1,50
C4092A	HP Laserjet J1100 (92A / EP-22)	
C4096A	HP Laserjet J2100 (96A / EP-32)	
C4127A	HP Laserjet 4000 RY(EP53) Black Empty Toner VIRGIN	0,30
C4127X	HP Laserjet 4000/50 OEM(EP52) Black Empty Toner VIRGIN	0,75
C4129X	HP Laserjet 5000 HY (EP62) Black Empty Toner VIRGIN	0,60
C4182X	HP Laserjet 8100 Black Empty Toner VIRGIN	0,50
C7115A	HP Laserjet 1200 HY Black Empty Toner VIRGIN	
C7115X	HP Laserjet 1200 HY Black Empty Toner VIRGIN	
C8061A	HP Laserjet 4100 RY Black Empty Toner VIRGIN	0,40
C8061X	HP Laserjet 4100 HY Black Empty Toner VIRGIN	0,75
C8543X	HP Laserjet 9000/9040MFP/9050MFP Black Empty Toner VIRGIN	3,00
C9700/1/2/3	HP Laserjet 1500 /2500	
C9704A	HP Laserjet 1500 /2500	
C9720A	HP Laserjet 4600	
C9721/2/3A	HP Laserjet 4600	
C9730A	HP Laserjet 5500 Black Empty Toner VIRGIN	
C9731/32/33A	HP Laserjet 5500 Empty Toner VIRGIN C/M/Y	
CB390	HP Laserjet CM 6040	
CB391/2/3	HP Laserjet CM 6040	
CB400A	HP LaserJet CP4005 Black Empty Toner VIRGIN	0,20
CB4001/2/3A	HP LaserJet CP4005 Empty Toner VIRGIN C/M/Y	0,20
CB435AI	HP LaserJet P1005 (Canon 712) Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	0,10
CB435A	HP LaserJet P1005 (Canon 712) Black Empty Toner VIRGIN	0,50
CB436AI	HP Laserjet M1120/M1522 CB436A (36A - CANON 713) <b>INTRODUCTORY</b>	0,10
CB436A	HP Laserjet M1120/M1522 CB436A (36A - CANON 713)	0,30
CB540AI	HP Laserjet CM1300/CP1210/CP1510 (Canon 716) Black Empty Toner VIRGIN	0,10
CB540A	HP Laserjet CM1300/CP1210/CP1510 (Canon 716) Black Empty Toner VIRGIN	0,25
CB541/42/43AI	HP Laserjet CM1300/CP1210/CP1510 (Canon 716) Empty Toner VIRGIN C/M/Y	0,10
CB541/42/43A	HP Laserjet CM1300/CP1210/CP1510 (Canon 716) Empty Toner VIRGIN C/M/Y	0,25
CC364A	HP Laserjet P 4014 Black Empty Toner VIRGIN	1,50

CC364X	HP Laserjet P 4014 Black Empty Toner VIRGIN	3,00
CC530AI	HP Laserjet CP2025/CM2320MFP Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	0,10
CC530A	HP Laserjet CP2025/CM2320MFP Black Empty Toner VIRGIN	0,10
CC531/32/33AI	HP Laserjet CP2025/CM2320MFP Empty Toner VIRGIN C/M/Y <b>INTRODUCTORY</b>	0,10
CC531/32/33A	HP Laserjet CP2025/CM2320MFP Empty Toner VIRGIN C/M/Y	0,50
CE250AI	HP Laserjet CP3525/CM3530 Starter Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	
CE251/52/53AI	HP Laserjet CP3525/CM3530 Starter C/M/Y Empty Toner VIRGIN <b>INTRODUCTORY</b>	
CE250A	HP Laserjet CP3525/CM3530 (Canon 723) Black Empty Toner VIRGIN	0,10
CE251/52/53A	HP Laserjet CP3525/CM3530 (Canon 723) C/M/Y Empty Toner VIRGIN	0,20
CE250X	HP Laserjet CP3525/CM3530 Black Empty Toner VIRGIN	0,20
CE255A	HP Laserjet P3011/3015 (Canon 724) Black Empty Toner VIRGIN	0,50
CE255X	HP Laserjet P3011/3015 HY Black Empty Toner VIRGIN	2,50
CE260A	HP Laserjet CP 4025/4525 CM 4540MFP Black Empty Toner VIRGIN	0,30
CE261/62/63A	HP Laserjet CP 4025/4525 CM 4540MFP C/M/Y Empty Toner VIRGIN	1,00
CE260X	HP Laserjet CP 4025/4525 CM 4540MFP HC Black Empty Toner VIRGIN	1,20
CE264X	HP Laserjet CM4540 Black Empty Toner VIRGIN	1,50
CE266C	HP Laserjet M9059 Black Empty Toner VIRGIN	
CE267C	HP Laserjet M4349X Black Empty Toner VIRGIN	
CE270A	HP CP5520 Black Empty Toner VIRGIN	2,00
CE271/72/73A	HP CP5520 C/M/Y Empty Toner VIRGIN	2,00
CE278AI	HP P1566/1606 Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	
CE278A	HP P1566/1606 Black Empty Toner VIRGIN	0,50
CE285AI	HP Laserjet P1100/1102 Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	0,10
CE285A	HP Laserjet P1100/1102 Black Empty Toner VIRGIN	0,50
CE310A	HP Laserjet Color CP1025/NW Black Empty Toner VIRGIN	0,40
CE311/12/13A	HP Laserjet Color CP1025/NW C/M/Y Empty Toner VIRGIN	1,20
CE314A	HP Laserjet Color CP1025/NW C/M/Y Empty Toner VIRGIN DRUM	0,50
CE320AI	HP Laserjet Color CP1415FN Starter Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	
CE321/22/23AI	HP Laserjet Color CP1415FN Starter C/M/Y Empty Toner VIRGIN <b>INTRODUCTORY</b>	
CE320A	HP Laserjet Color CP1415FN Black Empty Toner VIRGIN	0,25
CE321/22/23A	HP Laserjet Color CP1415FN C/M/Y Empty Toner VIRGIN	0,25
CE390A	HP Laserjet M4555/M600/602	1,50
CE390X	HP Laserjet M4555/M600/602	1,50
CE400A	HP Laserjet EP 500 507A	0,40
CE401/2/3A	HP Laserjet EP 500 507A	0,75
CE400X	HP Laserjet EP 500 507X	1,00
CE410A	HP Laserjet 305A	0,30
CE411/12/13A	HP Laserjet 305A	0,75
CE410X	HP Laserjet 305X	2,00
CE505AI	HP Laserjet P2035 (Canon 719) Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	0,10
CE505A	HP Laserjet P2035 (Canon 719) Black Empty Toner VIRGIN	0,30
CE505XI	HP Laserjet P2035 HY (Canon 719H and 720) Black Empty Toner VIRGIN <b>INT</b>	0,50
CE505X	HP Laserjet P2035 HY (Canon 719H and 720) Black Empty Toner VIRGIN	1,00
CE740A	HP Laserjet Colour CP5225dn Black Empty Toner VIRGIN	2,00
CE741/42/43A	HP Laserjet Colour CP5225dn C/M/Y Empty Toner VIRGIN	2,00
CF031/2/3A	HP Laserjet CM4540	0,50
CF210A	HP Laserjet (131A)	0,75
CF211/12/13A	HP Laserjet (131A)	1,00

CF210X	HP Laserjet (131X)	1,00
CF280A	HP Laserjet (80A)	0,75
CF280X	HP Laserjet (80X)	2,00
Q1338A	HP LaserJet 4200 Black Empty Toner VIRGIN	2,50
Q1339A	HP Laserjet 4300 Black Empty Toner VIRGIN	1,50
Q2610A	HP Laserjet 2300 HY Black Empty Toner VIRGIN	
Q2612A	HP Laserjet J1010 (12A)	0,10
Q2613A	HP Laserjet J1300 (13A)	
Q2613X	HP Laserjet 1300 HY Black Empty Toner VIRGIN	
Q2624A	HP Laserjet J1150 (24A)	
Q2670A	HP Laserjet 3500/3700 Black Empty Toner VIRGIN	
Q2671/72/73A	HP Laserjet 3500/3700 C/M/Y Empty Toner VIRGIN	
Q2681/82/83A	HP Laserjet 3700 C/M/Y Empty Toner VIRGIN	
Q3960A	HP Laserjet 2550 HY Black Empty Toner VIRGIN	
Q3961/62/63	HP Laserjet 2550 HY C/M/Y Empty Toner VIRGIN	
Q3964A	HP Laserjet 1550	
Q3970A	HP Laserjet 2550 RY Black Empty Toner VIRGIN	
Q3971/72/73A	HP Laserjet 2550 RY C/M/Y Empty Toner VIRGIN	
Q5942A	HP Laserjet 4250/4350 Black Empty Toner VIRGIN	1,50
Q5942X	HP Laserjet 4250/4350 HY Black Empty Toner VIRGIN	2,00
Q5945A	HP Laserjet 4345 MFP Black Empty Toner VIRGIN	2,00
Q5949A	HP Laserjet 1320/3390/3392 Black Empty Toner VIRGIN	0,10
Q5949X	HP Laserjet 1320/3390/3392 HC (Canon 708H) Black Empty Toner VIRGIN	0,50
Q5950A	HP Laserjet 4700 Black Empty Toner VIRGIN	0,30
Q5951/52/53A	HP Laserjet 4700 C/M/Y Empty Toner VIRGIN	0,30
Q6000A	HP Laserjet 1600/2600n (Canon 707) Black Empty Toner VIRGIN	
Q6001/2/3A	HP Laserjet 1600/2600n (Canon 707) C/M/Y Empty Toner VIRGIN	0,10
Q6460A	HP Laserjet 4730 Black Empty Toner VIRGIN	0,10
Q6461/62/63A	HP Laserjet 4730 C/M/Y Empty Toner VIRGIN	0,10
Q6470A	HP Laserjet 3600/3800 (Canon 711) Black Empty Toner VIRGIN	
Q6471/72/73A	HP Laserjet 3600/3800 (Canon 711) C/M/Y Empty Toner VIRGIN	0,20
Q6511A	HP Laserjet 2410/2420/2430 (Canon 310/710) Black Empty Toner VIRGIN	0,50
Q6511X	HP Laserjet 2410/2420/2430 HY (Canon 710H) Black Empty Toner VIRGIN	1,00
Q7516A	HP Laserjet 5200 Series Black Empty Toner VIRGIN	1,00
Q7551A	HP Laserjet P3005 RY Black Empty Toner VIRGIN	0,50
Q7551X	HP Laserjet P3005 HY Black Empty Toner VIRGIN	0,75
Q7553A	HP Laserjet P2015 HY (Canon 715H) Black Empty Toner VIRGIN	
Q7553X	HP Laserjet P2015 HY (Canon 715H) Black Empty Toner VIRGIN	0,50
Q7560A	HP Laserjet 3000 Black Empty Toner VIRGIN	
Q7561/62/63A	HP Laserjet 3000 C/M/Y Empty Toner VIRGIN	
Q7570A	HP Laserjet M5025/M503 Black Empty Toner VIRGIN	1,00
Q7580A	HP Laserjet 3800 (Canon 717) Black Empty Toner VIRGIN	
Q7581/82/83A	HP Laserjet 3800 (Canon 717) C/M/Y Empty Toner VIRGIN	0,20
<b>HP NON VIRGIN</b>		
C7115A-R	HP Lasejet 1200/1220 (15A) <b>NON VIRGIN</b>	
C7115X-R	HP Laserjet J1200/1220 (15X) <b>NON VIRGIN</b>	
C4127X-R	HP Laserjet 4000/50 Black Empty Toner <b>NON VIRGIN</b>	

C4129X-R	HP Laserjet 5000 HY Black Empty Toner <b>NON VIRGIN</b>	
C8061X-R	HP Laserjet J4100 (61X) <b>NON VIRGIN</b>	
C8543X-R	HP Laserjet 9000/9040MFP/9050MFP Black Empty Toner <b>NON VIRGIN</b>	<b>0,20</b>
CB435A-R	HP LaserJet P1005 (Canon 712) Black Empty Toner <b>NON VIRGIN</b>	
CB436A-R	HP LJM1120/M1522 CB436A (36A - CANON 713) <b>NON VIRGIN</b>	
CC364A-R	HP Laserjet P 4014 Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
CC364X-R	HP Laserjet P 4014 Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
CE255A-R	HP Laserjet P3011/3015 <b>NON VIRGIN</b>	<b>0,10</b>
CE255X-R	HP Laserjet P3011/3015 Black Empty Toner <b>NON VIRGIN</b>	<b>0,30</b>
CE505A-R	HP Laserjet P2035/2055 <b>NON VIRGIN</b>	
CE505X-R	HP Laserjet P2035 HY Black Empty Toner <b>NON VIRGIN</b>	<b>0,20</b>
Q1338A-R	HP LaserJet 4200 Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
Q1339A-R	HP Laserjet 4300 Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
Q5942A-R	HP Laserjet 4250/4350 HY Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
Q5942X-R	HP Laserjet 4250/4350 HY Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
Q5945A-R	HP Laserjet 4345 MFP Black Empty Toner <b>NON VIRGIN</b>	<b>0,50</b>
Q5949A-R	HP Laserjet SM 1160/1320 <b>NON VIRGIN</b>	
Q5949X-R	HP Laserjet SM 1160/1320 <b>NON VIRGIN</b>	
Q6511X-R	HP Laserjet 2410/2420/2430 HY Black Empty Toner <b>NON VIRGIN</b>	
Q7551X-R	HP Laserjet 3035 <b>NON VIRGIN</b>	
Q7553A-R	HP Laserjet P2015 <b>NON VIRGIN</b>	
Q7553X-R	HP Laserjet P2015 <b>NON VIRGIN</b>	
<b>BROTHER</b>		
DR130	Brother HL 4040 (DR110) Drum VIRGIN	<b>0,50</b>
DR230	Brother HL-3040 CN/3070 (DR210) B/C/M/Y Drum VIRGIN	
DR241	Brother HL3140CW/HL3150CDW DRUM	<b>0,30</b>
DR320	Brother HL-4140/4150/4570 Drum VIRGIN	<b>0,50</b>
DR2000	Brother HL2030/2040/2070N (DR350) Drum VIRGIN	
DR2005	Brother HL2035 Drum VIRGIN	<b>0,40</b>
DR2100	Brother HL 2140/2170 Drum VIRGIN	<b>0,75</b>
DR2200	Brother HL-2240D /250DN HL/2270DW Drum VIRGIN	<b>2,00</b>
DR3000	Brother HL5130/5140/5150D/5170DN Drum VIRGIN	<b>0,25</b>
DR3100	Brother HL5240/5250 Drum VIRGIN	<b>1,50</b>
DR3200	Brother HL5340D/5370DW/5350DN Drum VIRGIN	<b>1,50</b>
DR3300	Brother hl5440/5450/5470	<b>2,00</b>
DR4000	Brother HL6050/6050D/6050DN Drum VIRGIN	
DR5500	Brother HL7050 OPC (DR5500-DR700 (USA))	
DR6000	Brother HL1030/1230/1450/Fax8350 Drum VIRGIN	
DR7000	Brother HL1650/1670/1850/1870 Drum VIRGIN	
TN04	Brother HL 2700 B/M/C/Y Colour Empty Toner VIRGIN	
TN130	Brother HL4040CN B/M/C/Y Empty Toner VIRGIN	<b>0,22</b>
TN135	Brother HL4040CN B/M/C/Y Empty Toner VIRGIN	<b>0,20</b>
TN230	Brother HL-3040CN/3070CW B/C/M/Y Empty Toner VIRGIN	<b>0,40</b>
TN241BK	Brother HL3140CW/HL3150CDW Toner Negro 2.500 paginas	<b>0,30</b>
TN241C/M/Y	Brother HL3140CW/HL3150CDW Toner C/M/Y	<b>0,30</b>
TN320/25	Brother HL-4150CDN B/C/M/Y Empty Toner VIRGIN	<b>0,50</b>
TN328CMY	Brother HL-4570 B/C/M/Y Empty Toner VIRGIN	<b>0,50</b>

TN2000	Brother HL2030/2040/2070 (TN350) Black Empty Toner VIRGIN	0,30
TN2005	Brother HL2035 Black Empty Toner VIRGIN	0,25
TN2010	Brother HL2130 Black Empty Toner VIRGIN	0,30
TN2010I	Brother HL2130 Black Empty Toner VIRGIN <b>INTRODUCTORY</b>	0,20
TN2110	Brother HL 2140/2170(TN330) Black Empty Toner VIRGIN	0,20
TN2120	Brother HL 2140/2170 HC (TN360) Black Empty Toner VIRGIN	0,25
TN2210	Brother HL-2240D /250DN HL/2270DW Black Empty Toner VIRGIN	1,00
TN2210I	Brother HL-2240D /250DN HL/2270DW Black Empty Toner VIRGIN <b>INTRODU</b>	0,50
TN2220	Brother HL-2240D /250DN HL/2270DW HC Black Empty Toner VIRGIN	1,00
TN2220I	Brother HL-2240D /250DN HL/2270DW HC Black Empty Toner VIRGIN <b>INTRC</b>	0,50
TN3030	Brother HL5100 Series LC (TN540) Black Empty Toner VIRGIN	0,10
TN3060	Brother HL5100 Series HC (TN570) Black Empty Toner VIRGIN	0,10
TN3130	Brother HL 5240/5250DN/5270DN ( TN550) Black Empty Toner VIRGIN	1,00
TN3170	Brother HL5240/5250DN (TN580) Black Empty Toner VIRGIN	1,00
TN3230	Brother HL5340D/5370DW/5350DN (TN620) Black Empty Toner VIRGIN	1,00
TN3280	Brother HL5340D/5370DW/5350DN HC (TN650 ) Black Empty Toner VIRGIN	1,00
TN3330	Brother HL-5440D/5450DN/5470DW Toner, 3.000 pag	2,00
TN3380	Brother HL-5440D/5450DN/5470DW Toner, 3.000 pag	2,00
TN3390	Brother HL-5440D TONER (TN3390)	2,00
TN4100	Brother HL6000 Series (TN 670) Black Empty Toner VIRGIN	0,30
TN5500	Brother HL7050 TONER (TN5500-TN700 (USA))	
TN6300	Brother HL1240/1250/1270 Black Empty Toner VIRGIN	0,30
TN6600	Brother HL1240/1250/1270 Black Empty Toner VIRGIN	0,30
TN7300	Brother HL1240/1250/1270 ( TN7300/TN530) Black Empty Toner VIRGIN	0,10
TN7600	Brother HL1240/1250/1270 ( TN7300/TN530) Black Empty Toner VIRGIN	0,10
<b>BROTHER NON VIRGIN</b>		
DR2000-R	Brother HL2030/2040/2070N Drum <b>NON VIRGIN</b>	
DR2100-R	Brother HL 2140/2170 Drum <b>NON VIRGIN</b>	
DR2200-R	Brother HL-2240D /250DN HL/2270DW Drum <b>NON VIRGIN</b>	
DR3100-R	Brother HL5240/5250 Drum <b>NON VIRGIN</b>	0,30
DR3200-R	Brother HL5340D/5370DW/5350DN Drum <b>NON VIRGIN</b>	0,50
TN2000-R	Brother HL2030/2040/2070( TN350) Black Empty Toner <b>NON VIRGIN</b>	
TN2010-R	Brother HL2130 Black Empty Toner <b>NON VIRGIN</b>	
TN2110/20-R	Brother HL 2140/2170 Black Empty Toner <b>NON VIRGIN</b>	
TN2210/20-R	Brother HL2240D/250DN/2270DW Black Empty Toner <b>NON VIRGIN</b>	0,30
TN3130/70-R	Brother HL5240/5250DN Black Empty Toner <b>NON VIRGIN</b>	0,25
TN3230/80-R	Brother HL5340D/5370DW/5350DN Black Empty Toner <b>VIRGIN NON VIRGIN</b>	0,25
<b>CANON</b>		
CART.706	Canon Cartridge 706	
CART M	Canon PC1210D/PC1230D/PC1270D Black Empty Toner VIRGIN	
CANON-728	Canon cartridge 728	0,50
E30	Canon FC 210/330 / PC 770 Black Empty Toner VIRGIN	0,75
EP27	Canon LBP 3200 MF 3110/5630/50/5730	
FX3	Canon L60/90/250/300/50 (FX3)	
FX4	Canon L800/900 Fax Black Empty Toner VIRGIN	0,10
FX6	Canon L1000/3170-75MS Fax Black Empty Toner VIRGIN	
FX7	Canon L2000/2000IP Fax Black Empty Toner VIRGIN	0,10

FX8	Canon L400/PCD320/340 (CARTRIDGE T - FX8)	
FX10	Canon L100 120 (FX10)	
FX12	Canon L3000I (FX12)	0,25
<b>EPSON</b>		
S050166/7	Epson EPL 6200 (Minolta PP1300 / Toshiba T170F) Black Empty Toner	0,50
S050650	Epson Acul. M1400 (S050651/2) Black Empty Toner VIRGIN	
S050290	Epson EPL-N2550 (0290) Black Empty Toner VIRGIN	
S050614	Epson Acul. C1700 Black Empty Toner VIRGIN	
S050611/2/3	Epson Acul. C1700 C/M/Y Empty Toner VIRGIN	
S051099	Epson EPL 6200/6200L Drum VIRGIN	0,25
S051104	Epson C1100/C11XN Photoconductor Unit VIRGIN	
S050437/38	Epson M2000 (S050436-8) (S050435-7) Black Empty Toner VIRGIN	0,40
S050583/5	Epson M2400/2300 Black Empty Toner VIRGIN	0,40
S050477	Epson C9200 Black Empty Toner VIRGIN	
S050474/6	Epson C9200 C/M/Y Empty Toner VIRGIN	
S051173	Epson Aculaser M4000 (1170/3 - Xerox 4510) Black Empty Toner VIRGIN	
<b>IBM</b>		
28P2007	IBM InfoPrint 1130-1140 (28P2007-08-09-10) Black Empty Toner VIRGIN	0,25
28P2492/93	IBM Infoprint 1120/1125 Black Empty Toner VIRGIN	0,75
53P7705/06	IBM Infoprint 1222 Black Empty Toner VIRGIN	0,20
75P4303	IBM InfoPrint 1332 / 52/72 HC (75P4301-302-303) Black Empty Toner	0,10
75P6961	IBM Infoprint 1532/1552/1552N/1572 (75P6958-59-60-61) Black Empty	0,50
<b>LEXMARK</b>		
08A0475	Lexmark E320/322 (08A0475/6/7/8) Black Empty Toner VIRGIN	0,20
10S0150	Lexmark E210 Black Empty Toner VIRGIN	
12016SE	Lexmark E120 (12036SE) Black Empty Toner VIRGIN	0,25
12A5840	Lexmark T610 (12A5740/45-12A5840/45) Black Empty Toner VIRGIN	
12A6830	Lexmark T520 (12A6830/35/39/6730/35) Black Empty Toner VIRGIN	0,50
12A6860	Lexmark T620 Black Empty Toner VIRGIN (12A6860/65/69-6760/65)	
12A7405	Lexmark E321/E323 (12A7300/05-400/05) Black Empty Toner VIRGIN	0,20
12A7410	Lexmark T420 (12A7310/15-7410/15) Black Empty Toner VIRGIN	
12A7460	Lexmark T630 (12A7460/62/68-7360/62) Black Empty Toner VIRGIN	
12A7465	Lexmark T632 (12A7365) Black Empty Toner VIRGIN	
12A8420	Lexmark T430 (12A-8320/25-8420/25) Black Empty Toner VIRGIN	
17G0152	Lexmark M410/412/414 (4K00198/9 - 17G0152/4) Black Empty Toner VIRGIN	
18S0090	Lexmark X215 Black Empty Toner VIRGIN	0,10
34016/36HE	Lexmark E330/E332 Black Empty Toner VIRGIN	0,30
64016HE	Lexmark T640/642/644 (64036HE -64015HA) Black Empty Toner VIRGIN	
64016SE	Lexmark T640/642/644 (64036SE) Black Empty Toner VIRGIN	0,50
64416XE	Lexmark T644 (64436XE/04XA/15XA/35XA) Black Empty Toner VIRGIN	0,40
T650A11E	LexmarkT650/2/4 (T650A21E/H11E/H21E/H04E) Black Empty Toner Vi	0,75
E250A11E	Lexmark OPTRA E250 (E250A21E) Black Empty Toner VIRGIN	0,30
E250X22G	Lexmark OPTRA E250-OPC (E250X22G)	
E260A11E	Lexmark E260/360/460 (E260A21E) Black Empty Toner VIRGIN	0,40
E352H11E	Lexmark E350/352 Black Empty Toner VIRGIN	0,30
X644A11E	Lexmark X642/644/646 (X644A11E/X644H11E) Black Empty Toner VIRGIN	
<b>DELL</b>		

1100	Dell 1100/1110 Black Empty Toner VIRGIN (J9341)	0,20
1700	Dell 1700/1710 H3730 Black Empty Toner VIRGIN (J3815)	0,30
1700 opc	Dell 1700-OPC (D4283)	
1720	Dell 1720 (PY408/MW558/ XJ579) Black Empty Toner VIRGIN	0,30
1720 opc	Dell 1720-OPC (TJ987)	
1815	Dell 1815 (NF485/RF223 ) Empty Toner VIRGIN	0,75
2330D/DN	Dell 2330/2230D/DN PK 941/942 Black Empty Toner VIRGIN	0,40
2335	Dell 2335dn (CR963) Black Empty Toner VIRGIN	0,75
S2500	Dell S2500 (2Y668/669/R0883/884) Empty Toner VIRGIN	
3110	Dell 3110/15/30 (PF030/1161/113R00726/G478F) B/C/M/Y Empty Toner	0,50
3130	Dell 3130 Dell 593-10289/90/91/62	
5210	Dell 5210/5310 Black Empty Toner VIRGIN	0,50
M5200N	Dell M5200n (NO888/893/W2989/D1851) Empty Toner VIRGIN	0,10
<b>KYOCERA</b>		
TK110	Kyocera FS720/820/920 HC Black Empty Toner VIRGIN	0,30
TK140	Kyocera FS 1100 Black Empty Toner VIRGIN	0,25
TK160	Kyocera FS-1120D Black Empty Toner VIRGIN	0,40
TK170	Kyocera FS-1370DN Black Empty Toner VIRGIN	0,40
TK570B	Kyocera FS-C5400DN Black Empty Toner Virgin	0,30
TK570CMY	Kyocera FS-C5400DN C/M/Y Empty Toner Virgin	0,30
TK580B	Kyocera FS-C5150DN Black Empty Toner VIRGIN	0,30
TK580CMY	Kyocera FS-C5150DN C/M/Y Empty Toner VIRGIN	0,30
TK590B	Kyocera FS C5250DN Black Empty Toner VIRGIN	0,30
TK590CMY	Kyocera FS C5250DN C/M/Y Empty Toner VIRGIN	0,30
TK1115	Kyocera FS1041 - MFP1220-1320 (TK1115) TONER	0,20
TK1130	Kyocera FS1030MFP/1130MFP (TK1130)	0,20
TK1140	Kyocera FS1035MFP/1135MFP (TK1140)	0,20
TK3100	Kyocera FS2100 (TK-3100) TONER	0,20
TK3110	Kyocera FS4100DN (TK-3110) TONER	0,20
<b>PANASONIC</b>		
UG3313	Panasonic UF-550/770/880 Fax Black Empty Toner VIRGIN	
UG3350	Panasonic UF-585/595 Fax Black Empty Toner VIRGIN	0,30
UG3380	Panasonic UF-5300 Black Empty Toner VIRGIN	
<b>SAMSUNG</b>		
CLTK4072	Samsung CLP-320/325/320N/325W B/C/M/Y Empty Toner VIRGIN	0,25
CLTK4092	Samsung CLP310/315/3170 (Dell 1230/35) B/C/M/Y Empty Toner VIRGIN	0,40
CLTK5082B	Samsung CLP 620ND/670N/ND//CLX6220FX/6250FX Black Empty Toner VIRGIN	
CLTK5082C/M/Y	Samsung CLP 620ND/670N/ND//CLX6220FX/6250FX C/M/Y Empty Toner VIRGIN	
ML1092	Samsung MLT D1092L	
ML1210	Samsung ML-1210/1250 (ML1210-D3) TONER	
ML1520	Samsung ML1520 Black Empty Toner VIRGIN	
ML1610	Samsung ML1610 (not introductory) Black Empty Toner VIRGIN	
ML1710	Samsung ML-1510/1710/1750 (ML1710-D3) TONER	
ML2010	Samsung ML2010/2510/2571 ( (not introductory) Black Empty Toner VIRGIN	
M 2092	Samsung MLT 2092L	
ML2250	Samsung ML2250 Black Empty Toner VIRGIN	
ML2550	Samsung ML 2550D	

ML2850	Samsung ML2850D/2851ND HC (not introductory) Black Empty Toner VIRGIN	0,10
ML3050	Samsung ML3050 Black Empty Toner VIRGIN	
ML3470	Samsung ML3470/ML3471 Black Empty Toner VIRGIN	
ML4550	Samsung MLD4550/4551N Black Empty Laser	0,20
MLTD101	Samsung ML2160/2162/2165 SCX3400/3405	0,50
MLTD103L	Samsung ML2950 Black Empty Toner VIRGIN	0,50
MLTD1042S	Samsung ML1660/1665 Black Empty Toner VIRGIN	0,25
MLTD1052L	Samsung ML1910/15/2525/80 (SCX4600) Black Empty Toner VIRGIN	0,25
MLTD1082S	Samsung ML1640/2240 (not introductory) Black Empty Toner VIRGIN	
MLTD205E/L	Samsung ML3710 Black Empty Toner VIRGIN	0,75
SCX4100	Samsung SCX4100 Black Empty Toner VIRGIN	0,40
SCX-4216D3	Samsung SCX-4216D3/F/4016/SF560/565P (SCX4216-D3)	
SCX4300	Samsung SCX-4300 (MLT-D1092S/EL - not introductory) Black Empty Toner VIRGIN	
SCX4521D3	Samsung SCX4521D3/SEE/ELS Black Empty Toner VIRGIN	
SCX6320	Samsung SCX6320/6322DN Black Empty Toner VIRGIN	
<b>OKI</b>		
C110/30B	OKI C110/C130N Black Empty Toner VIRGIN	
C110/30CYM	OKI C110/C130N C/Y/M Empty Toner VIRGIN	
C310B	OKI C310/330/510/530 Black Empty Toner VIRGIN	0,40
C310CMY	OKI C310/330/510/530 C/M/Y Empty Toner VIRGIN	0,75
B411/31	OKI B411/431 Black Empty Toner VIRGIN	0,40
B2500	OKI B2500/2520 (299-23 / 182-23) Black Empty Toner VIRGIN	0,50
B6200	OKI B6200	0,40
3300	OKI C3300/3400	
5800	OKI C5800/5900	
<b>TINTA</b>		
<b>HP</b>		
364	HP CB316/17/18/19/20 HP364 B/M/C/Y	
364XL	HP CN384/CB322/23/24/25 HP364 XL B/M/C/Y	
920	HP CD971AE HP920 B/M/C/Y	
920XL	HP CD972/3/4/5 HP 920XL B/M/C/Y	
932XL	HP CN053A BK	0,25
933XL	HPCN054/55/56AE C/M/Y	0,25
940	HP C4902AE B/M/C/Y	
940XL	HPC4906AE/ C4907AE/C4908AE/C4909AE B/M/C/Y	
950	HP CN049 - HP 950 B/C/M/Y Empty Inkjet VIRGIN	0,10
950XL	HP CN045 - HP 950XL BK Empty Inkjet VIRGIN	
951XL	HP CN046/4/48AE HP 951XL C/M/Y	0,25
51626A	HP Deskjet 500C Series (N°26) Black Empty Inkjet VIRGIN	0,30
51629A	HP Deskjet 600 Series (N°29) Black Empty Inkjet VIRGIN	
51645A	HP DeskJet 720C (N°45) Black Empty Inkjet VIRGIN	0,30
C1823D	HP Deskjet 710C (N°23) Colour Empty Inkjet VIRGIN	0,10
C6578A	HP Deskjet 970 HY (N°78 A y XL) Colour Empty Inkjet VIRGIN	0,50
C6578D	HP Deskjet 970 HY (N°78) Colour Empty Inkjet VIRGIN	0,50
C6614A	HP Deskejet 610 (N°20) Black Empty Inkjet VIRGIN	0,25
C6615A	HP Deskejet 840-843 Black Empty Inkjet VIRGIN	0,30



C6625A	HP Deskjet 840-843 (N°17) Colour Empty Inkjet VIRGIN	0,25
C6656A	HP Deskjet 5550 (N°56) Black Empty Inkjet VIRGIN	0,20
C6656A/LC	HP Deskjet 5550 (N°56) Black Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	0,20
C6657A	HP Deskjet 5550 Series (N°57 )Colour Empty Inkjet VIRGIN	0,75
C6657A/LC	HP Deskjet 5550 Series (N°57 )Colour Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	0,50
C6658AE	HP Deskjet 5150/5550/5652/5850,N°58	0,10
C8727A	HP DeskJet 3420 (N°27) Black Empty Inkjet VIRGIN	0,25
C8728A	HP Deskjet 3420 (N°28) Colour Empty Inkjet VIRGIN	0,75
C8765E	HP DeskJet 5740 (N°338) Black Empty Inkjet VIRGIN	0,40
C8765E/LC	HP DeskJet 5740 (N°338) Black Empty Inkjet LOW CAPACITY VIRGIN	0,25
C8766E	HP DeskJet 5740 (N°343) Colour Empty Inkjet VIRGIN	0,30
C8767E	HP DeskJet 5740 (N°339) HY Black Empty Inkjet VIRGIN	0,10
C9351A	HP PSC 1410 (N°21) Black Empty Inkjet VIRGIN	0,30
C9351XL	HP PSC 1410 (N°21XL) Black Empty Inkjet VIRGIN	0,30
C9351A/LC	HP PSC 1410 (N°21) Black Empty Inkjet LOW CAPACITY VIRGIN	0,25
C9352A	HP Deskjet 3940 (N°22 ) Colour Empty Inkjet VIRGIN	0,75
C9352XL	HP Deskjet 3940 (N°22XL ) Colour Empty Inkjet VIRGIN	0,75
C9352A/LC	HP Deskjet 3940 (N°22 ) Colour Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	0,50
C9361E	HP 93 (N°342) Colour Empty Inkjet VIRGIN	0,30
C9362EE	HP Deskjet 5440 (N°336) Black Empty Inkjet VIRGIN	
C9362EE/LC	HP Deskjet 5440 (N°336) Black Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	
C9363EE	HP DeskJet 5740 HY (N°344) Colour Empty Inkjet VIRGIN	0,30
C9364EE	HP OfficeJet K7100 (N°337) Black Empty Inkjet VIRGIN	0,40
C9364EE/LC	HP OfficeJet K7100 (N°337) Black Empty Inkjet LOW CAPACITY VIRGIN	
C9369EE	HP DeskJet 5740 (N°348) Colour Empty Inkjet VIRGIN	0,10
CB334AE	HP Deskjet F4172/4180/4190 cartucho de tinta negro n°54	0,10
CB335EE	HP Photosmart C5100 (N°350) Black Empty Inkjet VIRGIN	0,30
CB335EE/LC	HP Photosmart C5100 (N°350) Black Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	
CB336EE	HP OfficeJet J 6400 (N°350XL) Black Empty Inkjet VIRGIN	0,30
CB337EE	HP J5780/5785 (N°351) Tricolour Empty Inkjet VIRGIN	0,10
CB338EE	HP OfficeJet J 6400 (N°351XL) Tricolour Empty Inkjet VIRGIN	0,30
CC640EE	HP Deskjet D2560 (N°300) Black Empty Inkjet VIRGIN	0,40
CC640EE/LC	HP Deskjet D2560 (N°300) Black Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	0,40
CC641EE	HP Deskjet D2560 (N°300XL) Black Empty Inkjet VIRGIN	0,50
CC643EE	HP Deskjet D2560 (N°300) Tricolour Empty Inkjet VIRGIN	0,50
CC643EE/LC	HP Deskjet D2560 (N°300) Tricolour Empty Inkjet VIRGIN LOW CAPACITY VIRGIN	0,50
CC644EE	HP Deskjet D2560 (N°300XL) Tricolour Empty Inkjet VIRGIN	0,75
CC653AE	HP Officejet J4580 (N°901) Black Empty Inkjet VIRGIN	0,50
CC654AE	HP Officejet J4580(N°901XL) Black Empty Inkjet VIRGIN	0,50
CC656AE	HP Officejet J4580 (N°901) Tricolour Empty Inkjet VIRGIN	0,75
CH561E	HP Deskjet 1000/2000/2050/3000 (N°301) Black Empty Inkjet VIRGIN	0,75
CH562E	HP Deskjet 1000/2000/2050/3000 (N°301) Colour Empty Inkjet VIRGIN	0,75
CH563EE	HP Deskjet 1000/2000/2050/3000 (N°301XL) Black Empty Inkjet VIRGIN	1,00
CH564EE	HP Deskjet 1000/2000/2050/3000 (N°301XL) Colour Empty Inkjet VIRGIN	1,00
<b>HP NON VIRGIN</b>		
51645A-R	HP DeskJet 720C (N°45) Black Empty Inkjet NON VIRGIN	
C6615D-R	HP Deskjet 840-843 Black Empty Inkjet NON VIRGIN	

C6578A/D-R	HP Deskjet 970 HY (N°78 - A and D) Colour Empty Inkjet NON VIRGIN	
C6656A-R	HP Deskjet 5550 (N°56) Black Empty Inkjet NON VIRGIN	0,10
C6657A-R	HP Deskjet 5550 Series (N°57) Colour Empty Inkjet NON VIRGIN	0,30
C8727A-R	HP DeskJet 3420 (N°27) Black Empty Inkjet NON VIRGIN	0,10
C8728A-R	HP Deskjet 3420 (N°28) Tri-Color Empty Injekt NON VIRGIN	0,30
C8765E-R	HP DeskJet 5740 (N°338) Black Empty Inkjet NON VIRGIN	
C8766E-R	HP DeskJet 5740 (N°343) Colour Empty Inkjet NON VIRGIN	
C9351A-R	HP PSC 1410 (N°21) Black Empty Inkjet NON VIRGIN	0,10
C9351XL-R	HP PSC 1410 (N°21XL) Black Empty Inkjet NON VIRGIN	0,10
C9352A-R	HP Deskjet 3940 (N°22) Tricolor Empty Inkjet NON VIRGIN	0,30
C9352XL-R	HP Deskjet 3940 (N°22XL) Tricolor Empty Inkjet NON VIRGIN	0,30
C9361E-R	HP 93 (N°342) Colour Empty Inkjet NON VIRGIN	
C9362EE-R	HP Deskjet 5440 (N°336) Black Empty Inkjet NON VIRGIN	
C9363EE-R	HP DeskJet 5740 HY (N°344) Colour Empty Inkjet NON VIRGIN	
C9364EE-R	HP OfficeJet K7100 (N°337) Black Empty Inkjet NON VIRGIN	
CB335EE-R	HP Photosmart C5100 (N°350) Black Empty Inkjet NON VIRGIN	
CB336EE-R	HP OfficeJet J 6400 (N°350XL) Black Empty Inkjet NON VIRGIN	
CB337EE-R	HP J5780/5785 (N°351) Tricolour Empty Inkjet NON VIRGIN	
CB338EE-R	HP OfficeJet J 6400 (N°351XL) Tricolour Empty Inkjet NON VIRGIN	
CC640EE-R	HP Deskjet D2560 (N°300) Black Empty Inkjet NON VIRGIN	0,20
CC641EE-R	HP Deskjet D2560 (N°300XL) Black Empty Inkjet NON VIRGIN	0,20
CC643EE-R	HP Deskjet D2560 (N°300) Tricolour Empty Inkjet NON VIRGIN	0,20
CC644EE-R	HP Deskjet D2560 (N°300XL) Tricolour Empty Inkjet NON VIRGIN	0,20
CH561E-R	HP Deskjet 1000/2000/2050/3000 (N°301) Black Empty Inkjet NON VIRGIN	0,30
CH562E-R	HP Deskjet 1000/2000/2050/3000 (N°301) Colour Empty Inkjet NON VIRGIN	0,30
CH563EE-R	HP Deskjet 1000/2000/2050/3000 (N°301XL) Black Empty Inkjet NON VIRGIN	0,30
CH564EE-R	HP Deskjet 1000/2000/2050/3000 (N°301XL) Colour Empty Inkjet NON VIRGIN	0,30
<b>LEXMARK</b>		
10N0016	Lexmark JP Z13 (N°16) Black Empty Inkjet VIRGIN	0,30
10N0026	Lexmark 10N0026	0,30
10N0217	Lexmark JP Z13 (N°17) Black Empty Inkjet VIRGIN	0,25
10N0227	Lexmark Z13 / Z23 / Z25 / Z33 / Z35 / Z515 / Z605	
12A1970	Lexmark JP 7000 (N°70 - M50) Black Empty Inkjet VIRGIN	0,10
12A1975	Lexmark JP 7000 (N°75) Black Empty Inkjet VIRGIN	0,10
13400HC	Lexmark 4076/JP1000 Empty Inkjet VIRGIN	0,30
17G0050	Lexmark JP Z12(N°50) Black Empty Inkjet VIRGIN	0,20
17G0648	Lexmark 17G0648E (48)	0,20
18C0031	Lexmark P915 (N°31) Photo Empty Inkjet VIRGIN	
18C0032	Lexmark P915 (N°32) Black Empty Inkjet VIRGIN	
18C0033	Lexmark Z800/815/X5250 (33)	0,10
18C0034	Lexmark P910 (N°34) Black Empty Inkjet VIRGIN	0,20
18C0035	Lexmark P910 (N°35) Colour Empty Inkjet VIRGIN	0,50
18C0781	Lexmark (LEX N°1) 18C0781	0,10
<b>CANON</b>		
BC01	Canon BJ10E/10EX/10SX/20 Black Empty Inkjet VIRGIN	0,50
BC02	Canon BJC 210 Black Empty Inkjet VIRGIN	0,50
BC20	Canon BJC4000/4550/5500 Black Empty Inkjet VIRGIN	

BX2	Canon B220/310/360 Fax Black Empty Inkjet VIRGIN	0,50
BX20	Canon B210C/FaxB160/MPC80 Black Empty Inkjet VIRGIN	
BX3	Canon B110/FaxB540 Black Empty Inkjet VIRGIN	0,50
PG37	Canon PG-37 Pixma IP2500 Black Empty Inkjet VIRGIN	
PG-40	Canon PIXMA IP1600	
PG-50	Canon PIXMA IP2200	
CL38	Canon CL-38 Pixma IP2500 Colour Empty Inkjet VIRGIN	0,10
CL41	Canon Pixma IP 1600 Colour Empty Inkjet VIRGIN	0,50
CL51	Canon Pixma IP 2200 Colour Empty Inkjet VIRGIN	0,40
PG210	Canon PG-210 INK	0,75
PG210XL	Canon PG-210XL INK	0,75
CL211	Canon CL-211 INK	1,00
CL211XL	Canon CL-211XL INK	1,00
PG510	Canon MP480/260/240 Black Empty Inkjet VIRGIN	0,75
CL511	Canon MP480/260/240 Colour Empty Inkjet VIRGIN	1,00
PG512	Canon MP480/260/240 Black Empty Inkjet VIRGIN	1,00
CL513	Canon MP480/260/240 Colour Empty Inkjet VIRGIN	1,00
PG540	Canon MG-2150/3150 Black Empty Inkjet VIRGIN	1,00
CL541	Canon MG-2150/3150 C/M/Y Empty Inkjet VIRGIN	1,00
PG540XL	Canon MG-2150/3150 HC Black Empty Inkjet VIRGIN	1,00
CL541XL	Canon MG-2150/3150 HC C/M/Y Empty Inkjet VIRGIN	1,00
<b>CANON NON VIRGIN</b>		
PG510-R	Canon MP480/260/240 Black Empty Inkjet <b>NON VIRGIN</b>	0,30
CL511-R	Canon MP480/260/240 Colour Empty Inkjet <b>NON VIRGIN</b>	0,30
PG512-R	Canon MP480/260/240 Black Empty Inkjet <b>NON VIRGIN</b>	0,30
CL513-R	Canon MP480/260/240 Colour Empty Inkjet <b>NON VIRGIN</b>	0,30
<b>DELL</b>		
M4640	Dell A 922 (J5566) Black Empty Inkjet VIRGIN	
M4646	Dell A 922 ( J5567) Colour Empty Inkjet VIRGIN	
MK990/992	Dell A926 Serie 9 Black Empty Inkjet VIRGIN	
MK991/993	Dell A926 Serie 9 Colour Empty Inkjet VIRGIN	
T0529	Dell A920/720 Black Empty Inkjet VIRGIN	
T0530	Dell N5882 Colour Empty Inkjet VIRGIN	
<b>SAMSUNG</b>		
M40	Samsung SF330/335T Black Empty Inkjet VIRGIN	0,30
M41	Samsung SF370 Black Empty Inkjet VIRGIN VIRGIN	0,20



















